Al-Box1

User Manual-English



Version: 1.2.3

To download the latest versions of the Quick Start Guide, multilingual user manual, software, driver, etc., please visit Lumens <u>https://www.MyLumens.com/support</u>

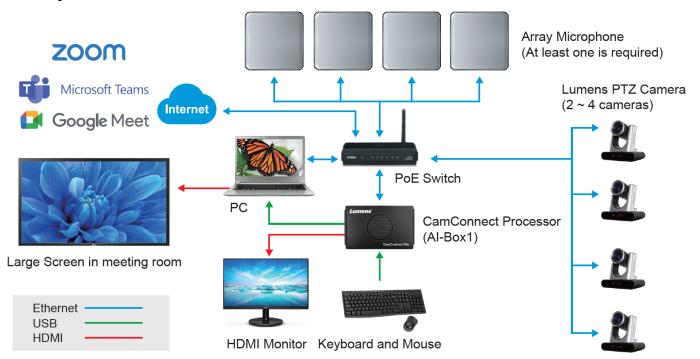


Table of Contents


Chapter 1 System Connection and Application2
1.1 System Connection2
1.2 AI-Box1 IO Interface2
Chapter 2 Support Devices
2.1 Shure
2.2 Sennheiser3
2.3 Nureva3
2.4 Yamaha3
Chapter 3 Operation Interface Description4
3.1 Microphone Setting4
3.2 Camera Control & Status5
3.3 Control and Preview5
3.3 Microphone orientation and camera preset relationship setting7
3.4 System Setting7
3.5 Video Output Setting8
3.6 Start Video Output9
3.7 Information9
Chapter 4 Web Page Function10
4.1 Device Setting10
4.2 Network11
4.3 Video Output Setting12
4.4 Maintenance12
4.5 About13
Chapter 5 Connect to a conference video software
5.1 Set the output mode of AI-Box1 to UVC and click the start streaming
option14
5.2 Launch a video software like Skype, Zoom, Microsoft Teams, or other
similar software14
5.3 Choose the video source, to output camera images
Chapter 6 Troubleshooting15
Copyright Information
Lumens

System Connection and Application

1.1 System Connection



1.2 AI-Box1 IO Interface

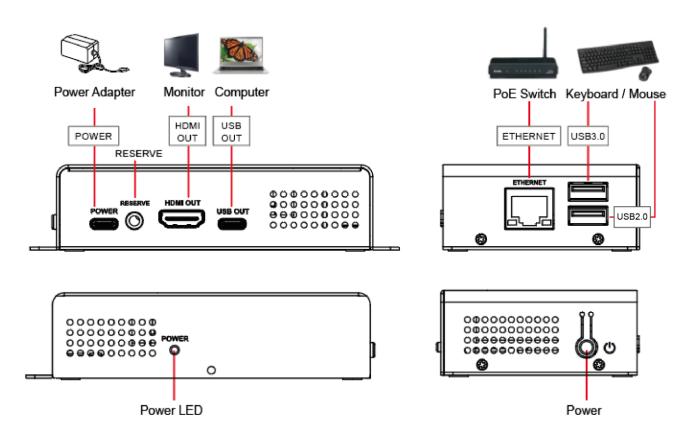



2.1 Shure


- Shure MXA310 Table Array Microphone
- Shure MXA910 Ceiling Array Microphone
- Shure MXA920 Ceiling Array Microphone

2.2 Sennheiser


Sennheiser TeamConnect Ceiling 2 (TCC2) Ceiling Microphone

<Note> When using TCC2 with CamConnect, please set and configure the channels on the Sennheiser Control Cockpit software first.

CamConnect is divided into 8 equal parts according to Senheisser's horizontal angle of view. They correspond to CamConnect Azimuth Angle 1 to 8.

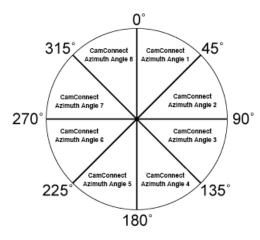

If the forbidden area is enabled on the Sennheiser Control Cockpit software, the corresponding position of CamConnect will also be affected. Example: If the forbidden area is set to 0° to 60°, the audio signal from 0° to 45° of CamConnect Array Azimuth 1 and 45° to 60° of Array Azimuth 2 will be ignored.

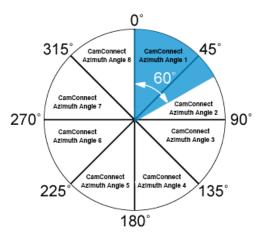

2.3 Nureva

- HDL300 Audio Conferencing System
- HDL310 Audio Conferencing System
- HDL410 Audio Conferencing System

2.4 Yamaha

Yamaha RM-CG Ceiling Array Microphone



Chapter 3 Operation Interface Description

		Advanced			Device & Camera Mappir	ng			
Devices : Sennheiser: TCC2	×	Audio Trigger Level > dB :	-55		Azimuth Angle	Camera		Preset N	o.
Device IP :		Time To Trigger Preset :	1.5 Sec 🗸		0~45	Off	V	1	V
Port : 45		Back To Home Time :	10 Sec 🗸		45 ~ 90	Off	~	2	×
Connect :		Back to Home Camera :	All		90 ~ 135	Off	×	3	×
		Back To Home Position :	Home 0		135 ~ 180	Off		4	·
			Apply		180 ~ 225	VC-R30(192.168.11.17)		5	
								5	~
					225 ~ 270	Off	~	0	×
					<u>270</u> ~ <u>315</u>	Off	×	7	~
					<u>315</u> ~ <u>360</u>	Off	×	8	V
Resolution : 1920-1080 V FF	PS: 60 V								
(Q)	Add								
VC-A61Pf	N	192.168.11.16	Connect	PTZ Control	AI Settir				
	N	192.168.11.16 192.168.11.17 192.168.11.22	Connect Disconnect Connect	PTZ Control PTZ Control PTZ Control		ng	_	_	

3.1 Microphone Setting

	Supported Devices & Settings	Advanced		
3	Devices : Sennheiser: TCC2	Audio Trigger Level > dB : -55		
3 4 5 6	Device IP :	🔰 Time To Trigger Preset : 1.5 Sec 🗸 🗸		
5	Port : 45	Back To Home Time : 10 Sec 🗸 🗸		
6	Connect :	Back to Home Camera : All		
		Back To Home Position : Home C 0		
No	Item	Function Descriptions		
1	Device Number	Select the desired number of microphones to connect		
2	Device List	Display the devices according to the Device Numbers		
3	Devices	Select Microphone Device		
4	Device IP	Enter the IP address of the microphone		
		Display based on the connected devices		
		• Shure : 2202		
5	Port	Sennheiser : 45		
		■ Nureva ÷ 8931		
		<remark> Only Nureva allows customized input of PORT</remark>		
6	Connect	Enable/Disable microphone connection		

7	Setting Mode	Enable/Disable Setting mode When the Setting mode is enabled, the microphone can receive signals, but it will not trigger the camera to the preset position. Enabling this mode is recommended when setting the preset position, to prevent microphone from interference from other sounds, triggered to unintended positions.
8	Audio Trigger Level > dB	Triggered only if audio source exceeds the preset dB <pre></pre> <pre><!--</th--></pre>
9	Time To Trigger Preset	Audio Reception Delay Settings When a second sound trigger occurs, there will be a delay in calling the preset position based on the configured duration in seconds.
10	Back To Home Time	Back To Home Time Settings If there is no audio input at the venue, it will trigger, after the set seconds, and return to Home
11	Back to Home Camera	Back To Home Camera Setting
12	Back To Home Position	Home Position Setting
13	Apply	Setting completed; click Apply

3.2 Camera Control & Status

	Camera Control & Status 1 Resolution : 1020*1000 V FPS : 60 V					
	Camera VC-A61PN	IP / USB Control Status Operation 192.168.11.16 Connect PTZ Control Al Setting				
	VC-R30 VC-R61PN	Disconnect PTZ Control Al Setting 192.168.11.27 Disconnect PTZ Control Al Setting 192.168.11.22 Connect PTZ Control Al Setting				
No	Item	Function Descriptions				
1	Resolution/ FPS	Resolution/FPS Settings (must match the camera output settings)				
2	Refresh/ Add	Click to search for the device again or manually enter the specified IP, and click [Add] to add it % Please ensure that the camera and AI-Box1 are on the same network segment.				
		Click [Connect] to establish a connection with the camera or / [Disconnect] to cancel the connection				
		The connected camera will be highlighted in blue				
3	Connect/ Disconnect	Disconnected:				
		Camera IP / USB Control Status VC-R30 192.168.11.14 Connect				
		•Connected:				
		Camera IP / USB Control Status VC-R30 192.168.11.14 Disconnect				
4	PTZ Control	Click to enable PTZ control Refer to <u>3.2.1 PTZ Control</u> for function description				
5	AI Setting	Enable/Disable AI People Tracking •Center Stage: After triggering to the preset position, the tracked person will be positioned in the center of view and tracking will stop after 5 seconds				
		 Continuous Tracking: The system will continuously track a person and keep them positioned in the center 				
	O MO [®]					



3.2.1 PTZ Control

	CamConnect	Image: Antipage of the state of the sta
No	Item	Function Descriptions
1	Preview window	Display the screen currently captured by the camera
2	L/R Direction	L/R Direction / Normal
3	Mirror / Flip	Set image mirroring/ flip
4	Pan/Tilt/Home	Adjust the Pan/Tilt position of the camera screen Click [Home] button to return to its central position
5	Preset setting	Click the number keys directly to call the preset • Save preset: Click Set first and then a number key • Clear preset: Click first and then a number key
6	AF/MF	Switch to Auto/Manual Focus. Focus can be adjusted in Manual
7		
	Zoom	Zoom In/ Zoom Out ratio



3.3 Microphone orientation and camera preset relationship setting

After the microphone device is connected, the camera can be controlled to turn to the corresponding preset position according to the microphone detection position.

·		vice & Camera Map	ping Camera		4 Preset	No.	
	•	0~45	VC-A61P(192.168.4.29)	\sim	1	\mathbf{v}	
	•	45 ~ 90	VC-A51PN(192.168.4.114)	\sim	2	V	
	•	90~135	Off	V	3	V	
	٠	135~180	Off	\sim	4	V	
	٠	180 ~ 225	Off	$\mathbf{\vee}$	5	V	
	٠	225 ~ 270	Off	V	6	$\mathbf{\vee}$	
	•	270 ~ 315	Off	×	7	\mathbf{v}	
	•	315 ~ 360	Off	\sim	8	V	
No	Item		Function	Desc	cripti	ons	
1	Indicator		dicator shows the status o		phone	signal	receptic

_		light indicates successful reception)
2	Array No. Azimuth Angle	 Array No.: For Shure models: Azimuth Angle: Applicable to Sennheiser, Nureva, and Yamaha models. The angle can be manually adjusted
3	Camera	Select the desired camera from the dropdown menu
4	Preset No.	Select the preset position for the camera from the dropdown menu

3.4 System Setting

onnection	
	Auto connection settings
age	English
ltem	Function Descriptions
	System Networks of the second


		Camera: Camera
		 Video Output: Automatic image output
3	Auto Save	Set automatic save interval in seconds
4	Reset/ Apply	Reset/Apply your settings
5	Network	System Network Ipv4 Method : DHCP Address : 192.168.100.201 Netmask : 255.255.255.0/24 ✓ Gateway : 192.168.100.1 Apply Ethernet Setting. When it is set to Static IP, the setting can be modified. Once the settings are completed, click Apply.

3.5 Video Output Setting

	Video Output Mode: UC Video Switching Mode: Seamess Switching				
No	ltem	Function Descriptions			
1	Video Output Mode	Set the Output Mode to either UVC or HDMI			
2	Video Output Layout	Configure the layout of the video output according to the provided reference in section <u>3.5.1 Video Output Layout</u> • Cross: 4-split screen • PBP: Picture by Picture screen • Crop: Screen cropping function < Remark> Choose either Cross/PBP only			
		Enable/disable the microphone connection function			



3.5.1 Video Output Layout

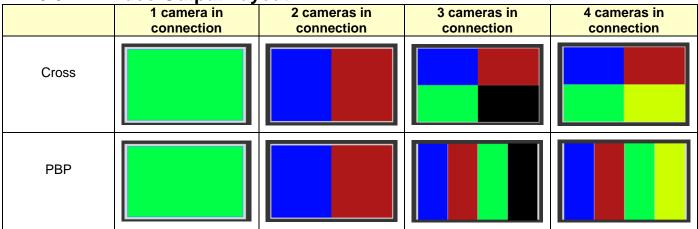

If there are three connected cameras, they will be displayed in a 4-grid layout, with one grid showing a black screen.




3.6 Start Video Output

Click to output the camera images to HDMI or UVC devices

<Note> Choose only either HDMI/UVC output. For setting the Output Mode, please refer to <u>3.5 Video Output</u> <u>Setting</u>

3.7 Information

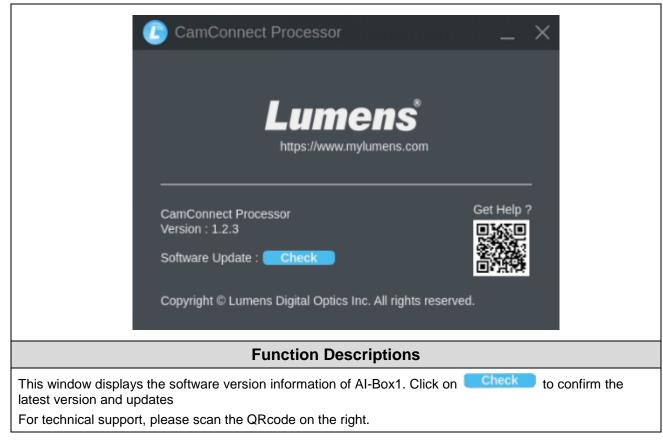



Chapter 4 Web Page Function

4.1 Device Setting

S → Dev	vice & Setting Device & Setting	
O Net	work	(3)
・ イ Mai	eo Output Setting ntenance Device: Se Device IP: 19	Azimuth Angle Camera Preset No. 0 - 45 Off ¥ 1 ¥ 2.168.11.4 0 45 ~ 90 Off ¥ 2
f Abc	Device Port:	90 - 135 Orf × 3 × 135 - 180 Orf × 4 × 135 - 180 Orf × 4 × 180 - 225 VC-R30(192.168.11.17) × 5 × 225 - 270 Orf × 6 × 270 - 315 Off × 7 × 315 - 360 Orf × 8 ×
	2 Resolution	Add Camera IP Control Status Operation VC-A61PN 192.168.11.16 Connect PTZ Control Al Setting VC-R30 192.168.11.17 Disonnect PTZ Control Al Setting VC-A61PN 192.168.11.22 Connect PTZ Control Al Setting
No	Item	Function Descriptions
1	Device & Setting	 Select the desired number of microphones to connect Devices: Select Microphone Device Device IP: Enter the IP address of the microphone Port: Display based on the connected devices Shure: 2202 Sennheiser: 45 Nureva: 8931 <remark> Only Nureva allows customized input of PORT</remark> Connect: Enable/Disable microphone connection Advanced: Advanced Function Settings Audio Trigger Level > dB: -55 Time to Trigger Preset: 1.5 Sec Back To Home times: 10 Sec Home • Audio Trigger Level > dB: Triggered only if audio source exceeds the preset dB



	Camera & Control Status	 Resolution/FPS: Resolution/FPS Settings (must match the camera output settings) Refresh: Perform a device search again Add: Manually enter the specified ip address and click on Add to add Remark> Please ensure that the camera and AI-Box1 are on the same network segment. Connect/Disconnect: Click [Connect]to establish a connection with the camera or / [Disconnect] to cancel the connection The connected camera will be highlighted in white 		
		Disconnected	Connected	
2		Control Status Connect	Control Status Disonnect	
		Connect	Disonnect	
		 PTZ Control: Click to access the camera's webpage settings 		
		Default username and password: admin/999		
		Please refer to the camera user manual for function description		
		 AI Setting: Enable/Disable AI People Tracking 		
		Center Stage: After triggering to the preset position, the tracked person will be positioned in the center of view and tracking will stop after 5 seconds		
		Continuous Tracking: The syst and keep them positioned in the	em will continuously track a person e center	
3	Device & Camera mapping	 Indicator: This indicator shows the s (A green light indicates successful red 	status of microphone signal reception. ception)	
		Array No. / Azimuth Angle:		
		Array No.: For Shure models:		
		 Azimuth Angle: Applicable to Sennheiser, Nureva, and Yamaha models. The angle can be manually adjusted 		
		Camera: Select the desired camera from the dropdown menu		
		 Preset No.: Select the preset position menu 	on for the camera from the dropdown	

4.2 Network

✤ Device & Setting	Network
Network	Network
Video Output Setting	
✤ Maintenance	Method DHCP V
About	IP Address 192.168.100.201
	Netmask 255.255.0/24 V
	Gateway 192.168.100.1
	Apply
	Function Descriptions
Ethernet Setting. When it is set to Sta click Apply.	atic IP, the setting can be modified. Once the settings are completed,
Lumens	

4.3 Video Output Setting

	✤ Device & Setting	Video Output Setting		
	Detwork	1 Video Streaming		
	Video Output Setting	g Video Streaming Enable		
	✤ Maintenance	2 Video Output Mode		
	f About	Output Mode UVC		
		3 Video Switching Mode		
		Seamless Switching		
		4 Video Output Layout		
		Cross		
		РВР		
		Сгор		
No	Item	Function Descriptions		
1	Video Streaming	Enable/disable the camera image output		
2	Video Output Mode	Set the Output Mode to either UVC or HDMI		
3	Video Switching Mode	Enable/disable the microphone connection function The system is set up for single screen output, and the screen switching is triggered by the microphone signal.		
4	Video Output Layout	Configure the layout of the video output according to the provided reference in section <u>3.5.1 Video Output Layout</u>		
		Cross: 4-split screen		
		PBP: Picture by Picture screen		
		Crop: Screen cropping function		
		<remark> Choose either Cross/PBP only</remark>		

4.4 Maintenance

✤ Device & Setting	Maintenance		
Network			
Video Output Setting	Setting Config Export Import		
✤ Maintenance			
f About			
Function Descriptions			
Users can Export/Import AI-Box1 configuration parameters			




4.5 About

	✤ Device & Setting		_	R			
	🏠 Network		Lume	ns			
	Video Output Setting						
	✤ Maintenance						
	1 About				Version:	V1.2.3	
					Update:	Check	
Function Descriptions							
This window displays the software version information of AI-Box1. Click on Check to confirm the latest version and updates							
For technical support, please scan the QRcode at the bottom right							




Chapter 5 Connect to a conference video software

5.1 Set the output mode of AI-Box1 to UVC and click the start streaming option

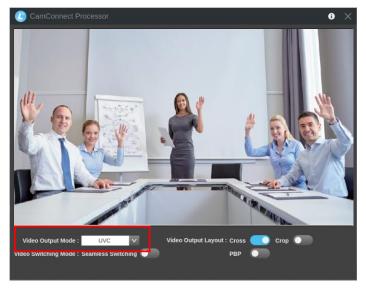

- 5.2 Launch a video software like Skype, Zoom, Microsoft Teams, or other similar software
- 5.3 Choose the video source, to output camera images
 - Video Source Name: Lumens CamConnect Processor

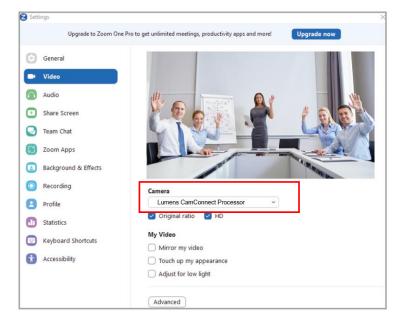



Chapter 6 Troubleshooting

This chapter describes problems you may encounter while using AI-Box1. If you have questions, please refer to related chapters and follow all the suggested solutions. If the problem still occurred, please contact your distributor or the service center.

NO	Problems	Solutions	
1.	Unable to search camera devices	 Check the power supply of camera or PoE power supply is stable. Make sure the PC is connected to the camera with the USB cable Replace the cables and make sure they are not faulty 	
2.	No response from the microphone detection position	Please confirm that the microphone device is in Connect status	
3.	When using with a Sennhesier microphone, no response at the specific angle	 Make sure the Azimuth Angle settings in the CamConnect software include that angle position Make sure if the angle is set as the forbidden area on Sennhesier Control Cockpit software. Refer to <u>3.2 Sennhesier Microphone</u> <u>System</u> for details. 	
4.	When setting camera preset positions, if the microphone detects signals from other directions, it may cause the camera to move to other positions, thus interrupting the setting	Please refer to <u>3.1 Microphone Setting</u> to enable the Setting mode Once enabled, the microphone can receive signals, but it will no trigger the camera to the preset position	
5.	Used together with Shure TCC2 microphone. Sound detection not sensitive, not accurate	Suitable for large-area positioning when Shure Designer Automatic coverage is On.	

<u>Lumens[®]</u>

Copyright Information

Copyrights © Lumens Digital Optics Inc. All rights reserved.

Lumens is a trademark that is currently being registered by Lumens Digital Optics Inc.

Copying, reproducing or transmitting this file is not allowed if a license is not provided by Lumens Digital Optics Inc. unless copying this file is for the purpose of backup after purchasing this product.

In order to keep improving the product, the information in this file is subject to change without prior notice.

To fully explain or describe how this product should be used, this manual may refer to names of other products or companies without any intention of infringement.

Disclaimer of warranties: Lumens Digital Optics Inc. is neither responsible for any possible technological, editorial errors or omissions, nor responsible for any incidental or related damages arising from providing this file, using, or operating this product.

